



| Originale | Sostituto |
|------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
|  Open / Close |  Eject / Surround |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Audio |  Audio / Lang I/II |
|  0 |  0 |
|  Display |  Display / Media |
|  Repeat |  Green / APP / Repeat |
|  Zoom |  Zoom / Size |
|  Top Menu |  D.Menu / Top |

| Originale | Sostituto |
|------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Top Menu |  Menu / Home |
|  Up |  Up |
|  Menu List |  Smart / List |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Clear |  Exit / Cancel / Clear |
|  Down |  Down |
|  Return |  Back / Return |
|  I<< Skip |  I<< / Preset- |
|  << Rev |  << / Tune- |
|  Fwd >> |  >> / Tune+ |
|  Skip >>I |  >>I / Preset+ |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Stop |  Stop / Hold |
|  T-Set |  Shift + Setup / OPT / Tools |



