







 



 



 







 






 




























































Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P +	 CH+ / Page+
 1	 1	 P -	 CH- / Page-
 2	 2	 Menu / DVD	 Menu / Home
 3	 3	 Exit / Back	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7	 7	 Right	 Right
 8	 8	 OK	 OK
 9	 9	 Guide / Top Menu	 D.Menu / Top
 0	 0	 Guide / Top Menu	 Shift + D.Menu / Top Menu
 DVD RTN	 Shift + 2	 TV Fav/Radio / Setup	 TV/Radio /
 Input	 AV / Input / RDS	 TV Fav/Radio / Setup	 Shift + TV/Radio / Program
 Audio A/D	 Audio / Lang I/II	 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer	 Green	 Green / APP / Repeat
 Vol +	 Vol+	 Yellow	 Yellow / YouTube / Repeat
 Vol -	 Vol-	 Blue	 Blue / Prime Video / Random

Originale	Sostituto	Originale	Sostituto
 P +	 CH+ / Page+	 P -	 CH- / Page-
 Menu / DVD	 Menu / Home	 Exit / Back	 Exit / Cancel / Clear
 Up	 Up	 Down	 Down
 Left	 Left	 Right	 Right
 OK	 OK	 Guide / Top Menu	 D.Menu / Top
 Guide / Top Menu	 Shift + D.Menu / Top Menu	 TV Fav/Radio / Setup	 TV/Radio /
 TV Fav/Radio / Setup	 Shift + TV/Radio / Program	 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random		





Originale	Sostituto
 Video Format	 Shift + 4
 Aspect	 Picture / Format
 Index i+	 Info / Angle
 Text / Mix	 Text / Goto
 Open/Close / Subtitle	 Eject / Surround
 Open/Close / Subtitle	 Shift + Eject / Surround
 Stop / Dual I/II	 Stop / Hold
 Stop / Dual I/II	 Shift + Stop /
 Play	 Play / Slow
 Pause / Step / [▼]	 Pause / Step / Freeze
 I<< / Reveal	 I<< / Preset-
 << / Hold	 Shift + << /
 << / Hold	 << / Tune-
 >> / Size	 Shift + >> /
 >> / Size	 >> / Tune+
 >>I / Cancel	 Shift + >>I / Preset+
 >>I / Cancel	 >>I / Preset+

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Menu/DVD	 Menu / Home
 Exit / Back	 Exit / Cancel / Clear

Originale	Sostituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Top Menu	 D.Menu / Top
 Down	 Down
 Set Up	 Setup / OPT /
 [<>]	 Picture / Format
 → / ←	 Display / Media
 [i+]/[≡i]	 Info / Angle
 Text/Audio	 Text / Goto
 Open/Close/Subtit	 Eject / Surround
 Stop/O	 Stop / Hold
 Play/[≡o]	 Play / Slow
 Pause/Step/[▽]	 Pause / Step / Freeze
 I<</[≡?]	 I<< / Preset-
 <</[≡+]	 << / Tune-



