



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Guide/Top		Guide / EPG / -/-
	9		9		Down		Down
	Recall		Back / Return		Tv/FAV/Radio/Set		TV/Radio /
	0		0		Tv/FAV/Radio/Set		Fav / Marker / PC
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat
	A/D/Content Menu		Smart / List		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Vol-		Vol-		[<>]		Picture / Format



















 

 







 



 



 







 



 



 
 


 



 



 







Originale	Sostituto
←[ / ]→	Display / Media
[i+] / [≡i]	Info / Angle
Text	Text / Goto
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Eject	Eject / Surround
O)I/II	Shift + Audio / Lang I/II
Stop	Stop / Hold
Play/[≡o]	Play / Slow
II/II > / [▽]	Pause / Step / Freeze
I<< / [≡?]	I<< / Preset-
<< / [≡+]	<< / Tune-
>> / [≡◇]	>> / Tune+
>>I/[O] / [≡X]	>>I / Preset+

Originale	Sostituto

















 



 



















 
















 














Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Guide/Top	 D.Menu / Top
 5	 5	 Down	 Down
 6	 6	 Tv/FAV/Radio/Set	 Setup / OPT /
 7	 7	 [ <> ]	 Picture / Format
 8	 8	 <[ / ]>	 Display / Media
 9	 9	 [i+]/[≡i]	 Info / Angle
 0	 0	 Text	 Text / Goto
 Source	 AV / Input / RDS	 Audio	 Audio / Lang I/II
 Vol+	 Vol+	 Subtitle	 Subtitle / EQ
 Vol-	 Vol-	 Eject	 Eject / Surround
 Mute	 Mute / Dimmer	 O)I/II	 Shift + Audio / Lang I/II
 Menu/DVD	 Menu / Home	 Stop	 Stop / Hold
 Exit/Return	 Back / Return	 Play/[≡o]	 Play / Slow







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Shift + Back / Return
	4		4		Exit/Return		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Guide/Top		D.Menu / Top
	Recall		Back / Return		Down		Down
	0		0		Tv/FAV/Radio/Set		TV/Radio /
	Source		AV / Input / RDS		Tv/FAV/Radio/Set		Setup / OPT /
	Vol+		Vol+		Red		Red / Netflix / Search
	A/D / Content		Smart / List		Green		Green / APP / Repeat
	P+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Originale		Sostituto	
	[<>]		Picture / Format
	<-[/]->		Display / Media
	[i+]/[≡i]		Info / Angle
	Text		Text / Goto
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Eject		Eject / Surround
	O)/II	+	Shift + Audio / Lang I/II
	Stop		Stop / Hold
	Play/[≡o]		Play / Slow
	II/II>/[▽]		Pause / Step / Freeze
	I<</[≡?]		I<< / Preset-
	<</[≡+]		<< / Tune-
	>>/[≡◇]		>> / Tune+
	>>I/[O]/[≡X]		>>I / Preset+

Originale	Sostituto

