









 
 
 























 






 


 

 

 




















Originale	Sostituto
 Power	 Power
 Micro	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Home	 Menu / Home
 ≡	 Setup / OPT /
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Vol+	 Vol+
 Guide	 Guide / EPG / -/-
 ▲	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 ▼	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Subt	 Subtitle / EQ
 0	 0
 TXT	 Text / Goto
 prime video	 Shift + Blue / Prime
 Netflix	 Shift + Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
 DAZN	 Display / Media		
 Tv NOW	 TV/Radio /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

