










 




































 



















 

 

 



 




 







 

 
 





Originale	Sostituto	Originale	Sostituto
 Open/Close	 Eject / Surround	 Slow I>	 CH+ / Page+
 Power	 Power	 Camera/Angle	 Info / Angle
 1	 1	 [...] / Subtitle	 Subtitle / EQ
 2	 2	 O))) / Audio	 Audio / Lang I/II
 3	 3	 Pause/Step	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 I<< Skip	 I<< / Preset-
 7	 7	 <</REV	 << / Tune-
 8	 8	 FWD/>>	 >> / Tune+
 9	 9	 Skip >>I	 >>I / Preset+
 +10	 Guide / EPG / -/-	 Up	 Up
 0	 0	 Left	 Left
 T/Search	 Red / Netflix / Search	 Enter	 OK
 EPM	 Picture / Format	 Right	 Right
 EAM	 Sound / Title	 Top Menu	 D.Menu / Top
 Mute	 CH- / Page-	 Down	 Down





Originale	Sostituto
 Menu	 Menu / Home
 Clear	 Exit / Cancel / Clear
 Display	 Display / Media
 Navi	 Smart / List
 Return	 Back / Return
 Memory	 Fav / Marker / PC
 Play Mode	 Shift + Play /
 A-B RPT	 Yellow / YouTube / Repeat
 PBC	 Blue / Prime Video / Random
 Setup	 Setup / OPT /
 Video Out	 Text / Goto
 HDMI	 Shift + 0
 Zoom	 Zoom / Size

Originale	Sostituto

