



Originale	Sostituto
Power	Power
Power Tv	Shift + Power
Tv/Video Tv	Shift + TV/Radio / Program
DVD/2nd Select	Red / Netflix / Search
FM/AM	Green / APP / Repeat
iPod	Yellow / YouTube / Repeat
Vol+ Tv	Shift + Right
Vol- Tv	Shift + Left
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Originale	Sostituto
0	0
+10	Guide / EPG / -/-
Disc/CD Mode	Blue / Prime Video / Random
Select >	CH+ / Page+
< Select	CH- / Page-
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Setup	Setup / OPT /
One Touch Play	Fav / Marker / PC
Menu/Play List	Menu / Home



