





 

 

 




 

 

 










Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Subtitle		Subtitle / EQ
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Originale	Sostituto	Originale	Sostituto
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Home		Shift + Menu /
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	TV		TV/Radio /
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-



