



Originale	Sostituto
 Power	 Power
 TV/Video	 AV / Input / RDS
 Counter Reset	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 Prog +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0
 Rec	 Rec / Rec Mode

Originale	Sostituto
 Timer Rec	 Sleep / Timer
 Slow	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold
 SP/LP	 Sound / Title
 A.Select	 Audio / Lang I/II





	Originale	Sostituto		Sostituto
	Power		Power	
	Source		AV / Input / RDS	
	1		1	
	2		2	
	3		3	
	PR+		CH+ / Page+	
	4		4	
	5		5	
	6		6	
	PR-		CH- / Page-	
	7		7	
	8		8	
	9		9	
	Vol+		Vol+	
	0		0	
	Vol-		Vol-	

Originale	Sostituto

