


 








 








 




 
 





 

 

 




 
 



 























Originale		Sostituto		Originale		Sostituto	
	Power		Power		10+		Guide
	Open / Close		Eject		Repeat		Text
	Card / USB		Media		A-B		D. Menu
	Subtitle		Subt		Zoom		Shift + Eject
	Disc		Smart		Setup		Options
	Language		Dual		PBC		TV/R
	DVD / DVBS		AV		Up		Up
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Title		List
	6		6		Menu		Menu
	7		7		Pause		Pause
	8		8		Slow		Shift + Play
	9		9		Resume		Shift + Stop
	0		0		<<		<<





	Originale	Sostituto	Originale	Sostituto
	>>	 >>		
	Play	 PLAY MODE		
	I<<	 I<<		
	>>I	 >>I		
	Stop	 Stop		
	3D	 ECO 3D		
	Vol+	 + VOL		
	Vol-	 - VOL		
	Mute	 MUTE		
	Step	 SHIFT +  Shift + Pause		
	OSD	 DISPLAY INFO		
	L/R	 FAV PRE-CH		
	Prog	 PROG SLEEP		
	Clear	 CLEAR EXIT		
	Goto	 RETURN BACK		

