








 


 

 





 



 

 



 



 











 

Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 	 Back / Return
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format

Originale	Sostituto
 Input	 AV / Input / RDS
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Red	 Red / Netflix / Search





Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Shift + Menu /
 Setup	 Setup / OPT /
 Mouse	 Display / Media
 Browser	 Guide / EPG / -/--
 Text	 Text / Goto
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <</Hold	 << / Tune-
 >>/Subpage	 >> / Tune+
 I<<	 I<< / Preset-
 >>I/Cancel	 >>I / Preset+
 Reveal	 Rec / Rec Mode
 Size	 Zoom / Size

Originale	Sostituto
 Index	 D.Menu / Top
 Tv/Radio	 TV/Radio /
 Mix	 Smart / List
 Sub-T	 Subtitle / EQ

