









































 










 






 





 













Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	1		1		EPG		Guide / EPG / -/-
	2		2		Up		Up
	3		3		CH+		CH+ / Page+
	4		4		Down		Down
	5		5		CH-		CH- / Page-
	6		6		Left		Left
	7		7		Vol-		Vol-
	8		8		Vol+		Vol+
	9		9		Right		Right
	0		0		OK		OK
	FAV		Fav / Marker / PC		Info		Info / Angle
	TV/R		TV/Radio /		Mute		Mute / Dimmer
	Red		Red / Netflix / Search		Text		Text / Goto
	Green		Green / APP / Repeat		Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat		Rec		Rec / Rec Mode
	Blue		Blue / Prime Video / Random		Subtitle		Subtitle / EQ





Originale	Sostituto	Originale	Sostituto
	Pause		Pause / Step / Freeze
	Back		Back / Return
	Play		Play / Slow
	Stop		Stop / Hold

