



| Originale | Sostituto |
|---|-----------------------|
|  | Mute |
|  | Power |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | SHIFT + CH PAGE - |
|  | PRESET- I<< / Preset- |
|  | SHIFT + TIMER SLEEP |
|  | HDMI - BAT 0 |
|  | SHIFT + CH PAGE + |
|  | PRESET+ >>I / Preset+ |

| Originale | Sostituto |
|---|-----------------------|
|  | Info / Angle |
|  | Subtitle / EQ |
|  | Audio / Lang I/II |
|  | Smart / List |
|  | Vol+ |
|  | Setup / OPT / |
|  | CH+ / Page+ |
|  | Vol- |
|  | TV/Radio / |
|  | CH- / Page- |
|  | Text / Goto |
|  | Fav / Marker / PC |
|  | Guide / EPG / -/- |
|  | Exit / Cancel / Clear |
|  | Up |
|  | Left |
|  | OK |



