








 

 

 


 



 




 



 





 


 
 






 
 






 
 
 


 
 



 




 

 
 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Up		Up		Exit		Exit
	Down		Down		P<P/Swap		Pre Ch
	Right		Right		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK/Select		Ok		P+		Ch +
	M		Menu		P-		Ch -
	1		1		PP		Eject
	2		2		I-II		Dual
	3		3		Tv/DTV		TV/R
	4		4		[≡]		Text
	5		5		[≡0]		Options
	6		6		AV/Source		AV
	7		7		[≡+]/[X]		Format
	8		8		[≡X]/[■ ■]		3D
	9		9		[.≡]/[■]		Subt





Originale		Sostituto		Originale	Sostituto
	[≡♦]	 APP MEDIA	Media		
	[≡?]	 RETURN BACK	Back		
	[≡i]	 DISPLAY INFO	Info		
	Red/[+]/Wide/↑	 A	Red		
	Green/↓	 B	Green		
	Yellow	 C	Yellow		
	Blue/Guide	 D	Blue		
	[i]	 E-MANUAL D.MENU	D. Menu		

