

 

 

 





 

 

 

 





 











 






 



Originale	Sostituto
 Power	 Power
 Program	 TV/Radio /
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Play	 Play / Slow
 C	 Exit / Cancel / Clear
 I<< Skip/Frame	 I<< / Preset-

Originale	Sostituto
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Skip/Frame >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Title	 Sound / Title
 Menu	 Menu / Home
 Display	 Display / Media
 Search Mode	 Red / Netflix / Search
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 OK
 Return	 Back / Return
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ





Originale	Sostituto	Originale	Sostituto
 Audio	 Audio / Lang I/II		
 Angle	 Info / Angle		
 Time	 Sleep / Timer		
 Repeat	 Green / APP / Repeat		
 A→B	 Yellow / YouTube / Repeat		

Originale	Sostituto

