







Originale	Sostituto
 Standby/On	 Power
 Open/Close	 Eject
 TV	 TV/R
 DV	 Smart
 AV	 AV
 Scan	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ADD/Clear	 Exit

Originale	Sostituto
 Navigation	 Pre Ch
 Menu	 Menu
 Setup	 Options
 Title	 List
 Up	 Up
 Down	 Down
 Select	 Ok
 Right	 Right
 Left	 Left
 Rec/OTR	 Rec
 Edit	 Guide
 Timer	 Shift + AV
 Play	 Play
 Stop	 Stop
 Pause/Step	 Pause
 Mute	 Mute
 CH+	 Ch +





Originale

Sostituto

	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Disc Oper		Blue
	Return		Back
	Repeat		Text
	Zoom		Shift + Eject
	Slow		Shift + Play
	Display		Info
	Prog		Sleep

Originale

Sostituto

	Random		Yellow
	PS/IS		Format
	Goto		3D

