










Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 Shift + 0
 List	 Smart / List
 FAV+	 Red / Netflix / Search
 FAV-	 Green / APP / Repeat
 Up	 Up

Originale	Sostituto
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Down	 Down
 Vol+	 Vol+
 Right	 Right
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Exit	 Exit / Cancel / Clear
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 PGUP	 Blue / Prime Video / Random
 PGDW	 Yellow / YouTube / Repeat
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 Recall	 Back / Return





Originale	Sostituto	Originale	Sostituto
 Pause	 Pause / Step / Freeze		
 Tv/Radio	 TV/Radio /		

