


 
 
 
 

 

 
 


 

 
 
 
 





 

 






 

 
 

 



 


 











 


 
 
 



 

 

Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Aspect	 Format
 Sleep	 Sleep
 TTX	 Text
 Index	 List
 Subtitle	 Subt
 Audio/I-II	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 0/10	 0
 -/--/+10	 Guide
 Recall/Program	 Pre Ch
 Menu	 Menu
 Source	 AV
 i/Display	 Info
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +





Originale	Sostituto
 CH-	 Ch -
 Red/D.Setup	 Red
 Green/D.Menu	 Green
 Yellow/T.List/Title	 Yellow
 Blue/R.List/D.Display	 Blue
 Open/Close/Mix	 Eject
 Goto/Hold	 Media
 A-B/Reveal	 Options
 Zoom/Size	 Shift + Eject
 Subpage	 Back
 Tv/Radio	 TV/R
 Rec/Repeat	 Rec
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <</List	 <<
 >>	 >>

Originale	Sostituto
 I<<	 I<<
 >>I/FAV	 >>I

