


 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	-/--		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Originale	Sostituto
 Text	 Text / Goto
 Mix	 Shift + Text /
 Size	 Shift + Zoom /
 Index	 Rec / Rec Mode
 Hold	 Stop / Hold
 Reveal	 Play / Slow
 Subpage	 Subtitle / EQ
 Cancel	 Exit / Cancel / Clear
 DVB Menu	 D.Menu / Top
 i	 Info / Angle
 EPG	 Guide / EPG / -/--
 ESC	 Fav / Marker / PC
 DVB	 Display / Media
 Freeze	 Pause / Step / Freeze
 I/II	 Audio / Lang I/II

Originale	Sostituto

