




 









 
 
 


 
 


 

 

 



 

 
 
 

 

 






 
 



 



 
 
 

 
 


 

 
 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down


 

 
 


 
 
 
 
 

 
 
 
Originale	Sostituto	Originale	Sostituto
 Vol -	 Vol -	 TV	 AUX
 CH +	 Ch +	 DVD	 SAT
 CH -	 Ch -	 PLAY MODE	 REC MODE
 Exit	 Exit	 FF	 II
 Red / USB Left	 Red	 ■	 ▶
 Red / USB Left	 Shift + Left	 SOUND	 AD
 Green / USB	 Green	 SETTINGS	 LIST
 Green / USB	 Shift + Down	 DUAL	 SUBT
 Yellow / USB Up	 Yellow	 PICTURE	 OPT
 Yellow / USB Up	 Shift + Up	 PROG	 SEARCH
 Blue / USB Right	 Blue	 SLEEP	 TV/R
 Blue / USB Right	 Shift + Right	 FORMAT	 3D
 Up	 Up	 E-MANUAL	 REPEAT
 Left	 Left	 ZOOM	 TIMER
 Enter	 Ok	 D.MENU	 TEXT
 Right	 Right	 TOP MENU	 DISPLAY INFO
 Down	 Down	 MENU	 INFO
		 CLEAR	 RETURN BACK
		 EXIT	 HOME
		 + VOL	 SMART
		 - VOL	 APP MEDIA
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		0	FAV
		GUIDE	PRE-CH
		A	B
		C	D
		Mandis SHOP	Mandis SHOP
		www.mandis.tv	www.mandis.tv









 



 












Originale	Sostituto	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Originale	Sostituto	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

