

 


 
 
 

 

 

 



 
 


















Originale		Sostituto		Originale		Sostituto	
	Power		Power		-IPI-		Shift + Format
	Source		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK/Select		Ok
	7		7		DTV Menu		D. Menu
	8		8		Call		Pre Ch
	9		9		ATV Menu		Menu
	0		0		Sleep		Sleep
	Mute		Mute		Exit		Exit
	Subtl		Subt		I/II		Dual
	Vol+		Vol +		QV		3D
	Vol-		Vol -		EPG		Guide
	-ISI-		Shift + Dual		Page+		>>





	Originale	Sostituto
	Page-	 <<
	Info	 Info
	Text	 Text
	Mix	 TV/R
	[II]/Size	 Format
	Index	 List
	Hold	 Media
	Reveal	 Options
	Cancel	 Back
	Subpage	 Eject
	Red	 Red
	Green	 Green
	Yellow	 Yellow
	Blue	 Blue

	Originale	Sostituto

