






 
 
 





 

 

 



 







 











 
 


 





Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Return	 Back
 TV/AV	 AV
 Timer	 Shift + AV
 Picture	 Format
 Sound	 Dual

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 UP/CH+	 Up
 Down/CH-	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Sys Menu	 Menu
 Display	 Shift + Info
 TV/TXT/Hold	 Media
 Cancel/Size	 3D
 Reveal	 Eject
 Nicam/A2	 Options
 Prog+	 Ch +
 Prog-	 Ch -
 Subpage	 List





Originale	Sostituto	Originale	Sostituto
INDEX	Index	HOME SMART	Smart
DVB-MENU	DVB Menu	E-MANUAL D.MENU	D. Menu
TV/RADIO	Tv/Radio	SEARCH TV/R	TV/R
EXIT	Exit	CLEAR EXIT	Exit
INFO	Info	DISPLAY INFO	Info
SUBTITLE	Subtitle	AD SUBT	Subt
FAV	FAV	FAV PRE-CH	Pre Ch
TEXT	Text	REPEAT TEXT	Text
EPG	EPG	SHIFT + GUIDE	Shift + Guide
A	Red	A	Red
B	Green	B	Green
C	Yellow	C	Yellow
D	Blue	D	Blue

Originale	Sostituto

