



Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 << / [≡o]	 << / Tune-
 >> / [≡?]	 >> / Tune+
  << / [≡+]	  << / Preset-
 >>  / [≡..]	 >>  / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 [≡i]	 Smart / List
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Freeze	 Shift + Pause / Step / Freeze

Originale	Sostituto
 Info	 Info / Angle
 [   ] / Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 EPG	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH+	 CH+ / Page+
 Vol-	 Vol-
 REP/Rec	 Rec / Rec Mode
 CH-	 CH- / Page-
 1	 1





Originale		Sostituto		Originale		Sostituto	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
AUDIO	Audio	LANG I/II AUDIO	Audio / Lang I/II				
0	0	HDMI - BAT 0	0				
RECALL	Recall	RETURN BACK	Back / Return				








Originale	Sostituto	Originale	Sostituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Originale	Sostituto	Originale	Sostituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1















Originale	Sostituto	
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG		Guide / EPG / -/--
0		0
FAV		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
<</Hold		Shift + Stop /
FAV-		Shift + Left

Originale	Sostituto	
FAV+		Shift + Right
-/--		Shift + Guide / EPG / -/--


















Originale	Sostituto
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡⇅]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡⇅]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Originale	Sostituto
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Originale	Sostituto	Originale	Sostituto
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Epg	 Guide / EPG / -/--		
0	 0		
Fav	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Freeze	 Shift + Pause / Step /		

