 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 A-B	 TV/R
 Sleep	 Sleep	 Program	 Shift + Sleep
 Dimmer	 Media	 Volume+	 Vol +
 Open/Close	 Eject	 Volume-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 Title	 List
 3	 3	 Menu/PBC	 Menu
 4	 4	 Return	 Back
 5	 5	 Setup	 Options
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 >10	 Guide	 Stop	 Stop
 Repeat	 Text	 Play	 Play
 Goto	 3D	 Pause	 Pause

Originale	Sostituto	Originale	Sostituto
 A-B	 TV/R	 TV	 AUX
 Program	 Shift + Sleep	 DVD	 SAT
 Volume+	 Vol +	 PLAY MODE	 REC MODE
 Volume-	 Vol -	 Play	 Pause
 Mute	 Mute	 Stop	 Red
 Title	 List	 Fast Rewind	 Fast Forward
 Menu/PBC	 Menu	 Disc Nav	 Sound
 Return	 Back	 Dual	 Subst
 Setup	 Options	 Search	 Picture
 Up	 Up	 Sleep	 TV/R
 Down	 Down	 Format	 3D
 Right	 Right	 E-Manual	 Repeat
 Left	 Left	 Zoom	 Timer
 Enter	 Ok	 D.Menu	 Text
 Stop	 Stop	 Top Menu	 Display Info
 Play	 Play	 Menu	 OK
 Pause	 Pause	 Return	 Back
		 Clear	 Exit
		 Home	 Smart
		 + VOL	 APP
		 - VOL	 MEDIA
		 + CH	 - CH
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		 0	 FAV
		 GUIDE	 PRE-CH
		 A	 B
		 C	 D
		 Mandis SHOP	 www.mandis.tv



