



Originale	Sostituto
 Power	 Power
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 CH Sel	 TV/R
 CH/Level Up	 Ch +
 CH/Level Down	 Ch -
 SPK SET	 Exit
 PLII PARA.	 D. Menu
 Adjust -	 Shift + Down
 Adjust +	 Shift + Up
 Mute	 Mute

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 Auto	 Subt
 DSP -	 Shift + Left
 DSP +	 Shift + Right
 Stereo	 Dual
 Setup / OSD	 Options
 Menu / T.Tone	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display / Sleep	 Info
 Display / Sleep	 Sleep
 Return /	 Back
 Stop / P.Scan	 Stop





Originale	Sostituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH +	 Ch +
 TV CH -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Originale	Sostituto
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2





Originale	Sostituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD Menu	 Menu
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD OSD /	 Format
 DVD Up	 Up
 DVD Left	 Left
 DVD Enter	 Ok

Originale	Sostituto
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5
 DVD 6	 6
 DVD 7	 7





Originale	Sostituto
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD	 Shift + Green
 CD Pause	 Pause
 CD Play	 Play
 CD Stop	 Stop
 CD I<<	 I<<
 CD >>I	 >>I
 CD 1	 1
 CD 2	 2
 CD 3	 3
 CD 4	 4

Originale	Sostituto
 CD 5	 5
 CD 6	 6
 CD 7	 7
 CD 8	 8
 CD 9	 9
 CD 0	 0
 VCR Power	 Shift + Power
 VCR CH Sel.	 Shift + Media
 VCR Rec	 Shift + Rec
 VCR Play	 Shift + Play
 VCR Mute	 Shift + Mute
 VCR >>	 Shift + >>
 VCR <<	 Shift + <<
 VCR Volume -	 Shift + Vol -
 VCR Volume +	 Shift + Vol +
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -



