 







 



 



 
 


 
 


 
 
 
 
 
 


 
 


 
 


 
 


 



 
 

 





 
 
 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Left	 Left
 Mute	 Mute	 OK	 Ok
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +
 4	 4	 Vol-	 Vol -
 5	 5	 Red	 Red
 6	 6	 Yellow	 Yellow
 7	 7	 Blue	 Blue
 8	 8	 Green	 Green
 9	 9	 EPG	 Guide
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 TTX	 Text
 Exit	 Exit	 Audio	 Dual
 Up	 Up	 i	 Info
 Down	 Down	 FAV	 Pre Ch
 Right	 Right	 Tv/Radio	 TV/R

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 FF	 FF
 FR	 FR	 SOUND	 AD
 DISC NAV	 DISC NAV	 SETTINGS	 SETTINGS
 LIST	 LIST	 DUAL	 SUBT
 PROG	 PROG	 PICTURE	 ECO
 SLEEP	 SLEEP	 TV/R	 FORMAT
 E-MANUAL	 E-MANUAL	 REPEAT	 3D
 D.MENU	 D.MENU	 TEXT	 TIMER
 TOP MENU	 TOP MENU	 DISPLAY	 INFO
 MENU	 MENU	 OK	 OK
 CLEAR	 CLEAR	 RETURN	 RETURN
 EXIT	 EXIT	 BACK	 BACK
 VOL +	 VOL +	 HOME	 SMART
 VOL -	 VOL -	 APP	 MEDIA
 1	 1	 CH +	 CH +
 2	 2	 CH -	 CH -
3	3	GUIDE	GUIDE
4	4	0	PRE-CH
5	5	A	A
6	6	B	B
7	7	C	C
8	8	D	D
9	9		
0	0		





Originale	Sostituto	Originale	Sostituto
VIDEO	Video	HOME SMART	Smart
SCAN	Scan	APP MEDIA	Media
DEVICE	Device	SETTINGS OPT	Options
FILE	File	DISC NAV LIST	List
ZOOM	Zoom	ZOOM	Eject
ROLL	Roll	TIMER AV	AV
RECORD	Record	REC MODE	Rec
PREV	Prev.	II<<	I<<
NEXT	Next	>>I	>>I
▶/	Play	▶	Play
▶/	Pause		Pause
<<	<<	<<	<<
>>	>>	>>	>>

Originale	Sostituto

