 



 

 

 

 

 

 



 



 

 

 



 

 

 

 

 

 

 

 







 







Originale		Sostituto		Originale		Sostituto	
	Power		Power		1		1
	Rec		Rec / Rec Mode		2		2
	TV		TV/Radio /		3		3
	TXT		Text / Goto		4		4
	Home		Menu / Home		5		5
	Up		Up		6		6
	i		Info / Angle		7		7
	Left		Left		8		8
	OK		OK		9		9
	Right		Right		EPG		Guide / EPG / -/--
	Down		Down		0		0
	Back		Back / Return				
	Vol+		Vol+				
	P+		CH+ / Page+				
	Vol-		Vol-				
	W		Display / Media				
	P-		CH- / Page-				

