



Originale	Sostituto
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 MENU	 Menu
 EXIT	 Exit
 V+	 Vol +
 V-	 Vol -
 MUTE	 Mute
 ←	 Back

Originale	Sostituto
 P+	 Ch +
 P-	 Ch -
 UP	 Up
 LEFT	 Left
 OK	 Ok
 RIGHT	 Right
 DOWN	 Down
 INFO	 Info
 GUIDE	 Guide
 TV	 TV/R
 RADIO	 Shift + TV/R
 RED	 Red
 GREEN	 Green
 YELLOW	 Yellow
 BLUE	 Blue
 TXT	 Text

