



Originale	Sostituto
Power	Power
DTV/ATV	Display / Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	+ Shift + Guide / EPG / -/--
Recall	Back / Return
P.Mode	Picture / Format
S.Mode	Sound / Title
Aspect	Zoom / Size

Originale	Sostituto
Menu	Menu / Home
Source	AV / Input / RDS
Exit	Exit / Cancel / Clear
i	Info / Angle
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
V+	Vol+
V-	Vol-
Mute	Mute / Dimmer
MTS	Eject / Surround
Timer	Sleep / Timer
P+	CH+ / Page+
P-	CH- / Page-
Red	Red / Netflix / Search



