

 





 
 

 














 


Originale	Sostituto
 Power	 Power
 Portal/Energy Saving	 Sleep / Timer
 []/Ratio	 Picture / Format
 Input	 AV / Input / RDS
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.View	 D.Menu / Top

Originale	Sostituto
 Vol+	 Vol+
 Fav	 Fav / Marker / PC
 PR+/Page Up	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 PR-/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Settings	 Setup / OPT /
 Info/Home	 Info / Angle
 Q.Menu/3D	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Guide	 Guide / EPG / -/-





Originale		Sostituto	
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto
	T.Opt		Shift + Setup / OPT / Tools
	Subtitle		Subtitle / EQ
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	Simplink		Display / Media
	AD		Audio / Lang I/II
	Rec		Rec / Rec Mode
	My APPS		Shift + Green / APP / Repeat

Originale	Sostituto

