 
 







 

 



 
 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 5	 5
 Red/Sound ↑	 Red	 6	 6
 Green/Picture/↓	 Green	 7	 7
 Yellow/Feature	 Yellow	 8	 8
 Blue/Install	 Blue	 9	 9
 [=]	 REPEAT TEXT	 0	 0
 [=0]	 SETTINGS OPT	 P<P	 FAV PRE-CH
 [=+]	 AD SUBT	 -/--	 SHIFT + -/--
 [=x]/[· ·]	 PICTURE FORMAT	 Vol+	 + VOL
 [/ =] / [*]	 RETURN BACK	 Vol-	 VOL -
 [+](=[♦])/Wide	 ECO 3D	 Mute	 MUTE
 [=?]/PC	 HOME SMART	 P+	 + CH
 [=i]/Guide	 -/-- GUIDE	 P-	 CH -
 1	 1	 I-II	 SOUND DUAL
 2	 2	 [i]/Info	 DISPLAY INFO
 3	 3	 TV/DTV	 SEARCH TV/R
 4	 4	 AV	 TIMER AV

Originale	Sostituto	Originale	Sostituto
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9
 0	 0	 0	 0
 P<P	 FAV PRE-CH	 P<P	 FAV PRE-CH
 -/--	 SHIFT + -/--	 -/--	 SHIFT + -/--
 Vol+	 + VOL	 Vol+	 + VOL
 Vol-	 VOL -	 Vol-	 VOL -
 Mute	 MUTE	 Mute	 MUTE
 P+	 + CH	 P+	 + CH
 P-	 CH -	 P-	 CH -
 I-II	 SOUND DUAL	 I-II	 SOUND DUAL
 [i]/Info	 DISPLAY INFO	 [i]/Info	 DISPLAY INFO
 TV/DTV	 SEARCH TV/R	 TV/DTV	 SEARCH TV/R
 AV	 TIMER AV	 AV	 TIMER AV





	Originale	Sostituto	Originale	Sostituto
	PP	 Media		
	Up	 Up		
	Down	 Down		
	Right	 Right		
	Left	 Left		
	OK/Select	 Ok		
	M	 Menu		

