

 

 
 
 
 
 
 
 
 
 


 


 


 
 

 

 

 

 

 





Originale	Sostituto
 POWER	 Power
 INFO	 Info
 HDMI CONTROL	 Media
 SLEEP	 Sleep
 SCREEN	 Format
 SOURCE	 AV
 PRESETS	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 RETURN	 Back
 MENU	 Menu
 ZOOM/RED/▲	 Red
 REPEAT/GREEN/▼	 Green
 ROOT/YELLOW	 Shift + Yellow
 TITLE/BLUE	 Blue
 OK/SELECT	 Ok
 UP	 Up
 DOWN	 Down
 RIGHT	 Right
 LEFT	 Left
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 FAV	 Pre Ch
 LANG	 Dual





Originale	Sostituto
SUBTITLE	Subt
MUTE	Mute
SWAP/↔	Exit
EPG	Guide
-/--	Shift + Guide
TEXT	Text
C	Yellow
DISPLAY	Shift + Info
ANGLE	3D
SEARCH MODE	TV/R
REC	Rec
STOP	Stop
PLAY	Play
PAUSE	Pause
<<	<<
>>	>>
I<<	I<<

Originale	Sostituto
>>	>>

