
 
 

 


 
 















 


 
 

 






Originale	Sostituto
 MUTE	 Mute
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 AV	 AV
 Menu	 Menu
 Red	 Red
 OK	 Ok

Originale	Sostituto
 Green	 Green
 P:P	 Pre Ch
 Yellow	 Yellow
 Analog	 Smart
 Blue	 Blue
 Up	 Up
 P+	 Ch +
 P-	 Ch -
 Down	 Down
 Right	 Right
 Vol+	 Vol +
 Vol-	 Vol -
 Left	 Left
 Recall	 Back
 Sleep	 Sleep
 Status	 3D
 Tv/TXT	 Text





Originale		Sostituto	
	Stop		Stop
	Reveal		Media
	Size		Format
	Mix		Options
	Index		Info
	Subcode		Subt
	Cancel		Shift + Back

Originale		Sostituto	

