



Originale		Sostituto		Originale		Sostituto	
	Power		Power		OSD/Info		Info / Angle
	1		1		Prog		TV/Radio /
	2		2		Setup		Setup / OPT /
	3		3		Menu		Menu / Home
	4		4		Audio		Audio / Lang I/II
	5		5		Title		Shift + Sound / Title
	6		6		Subtitle		Subtitle / EQ
	7		7		Timer		Shift + Sleep / Timer
	8		8		+10		Guide / EPG / -/-
	9		9		Sleep		Sleep / Timer
	0		0		Play		Play / Slow
	AUX		Shift + 7		Clock		Back / Return
	USB		Shift + 8		Pause		Pause / Step / Freeze
	Card		Shift + 4		Enter		OK
	DVD		Shift + 2		Up/Preset+		Up
	Tuner		Shift + 6		Down/Preset-		Down
	Tape		Shift + 5		>>/Tun+		>> / Tune+



