 









 





 

 

 

 

 





 

 

 

 

 














 

 

 


 
































 







Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

 



Originale	Sostituto
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 Swap	 Fav / Marker / PC
	 D.Menu / Top
	 Smart / List
 Source	 AV / Input / RDS
 Menu	 Menu / Home
	
	
 OK	 OK
	
	
 C	 Exit / Cancel / Clear
 Disp.	 Display / Media
 Search Mode	 Shift + Red / Netflix /
 Return	 Back / Return




Originale
Sostituto

	CH+		CH+ / Page+
	Info		Info / Angle
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	Stop		Stop / Hold
	>>		>> / Tune+
	Red/↑/Zoom		Red / Netflix / Search
	Red/↑/Zoom		Zoom / Size
	Green/↓/Repeat		Green / APP / Repeat

Originale
Sostituto

	Yellow/Root		Yellow / YouTube / Repeat
	Blue/Title		Blue / Prime Video / Random

