



 







 



















Originale	Sostituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Shift + Back / Return
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Camera/Music/Ph	Picture / Format
Guide	Guide / EPG / -/-
*/o	Shift + Guide / EPG / -/-
*/o..	Fav / Marker / PC





	Originale	Sostituto	Originale	Sostituto
	 [=]/Text	 Text / Goto		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 Lang	 Audio / Lang I/II		
	 [=]..	 Shift + Text /		
	 [-o-]	 Setup / OPT /		
	 <<	 << / Tune-		
	 Pause	 Pause / Step / Freeze		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Stop	 Stop / Hold		

