



Originale		Sostituto		Originale		Sostituto	
	Power		Power		EPG		Guide
	Mute		Mute		Menu		Menu
	Red		Red		Info		Info
	Green		Green		Up		Up
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	<<		<<		Right		Right
	>>		>>		Down		Down
	I<<		I<<		FAV		Pre Ch
	>>I		>>I		Exit		Exit
	Play		Play		Vol+		Vol +
	Pause		Pause		Vol-		Vol -
	Stop		Stop		Rec		Rec
	Media		Media		USB		Smart
	Subtitle		Subt		USB		AV
	TTX		Text		CH+		Ch +
	Audio		Dual		CH-		Ch -





Originale		Sostituto		Originale		Sostituto	
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
BACK	Back	RETURN BACK	Back				
TV/RADIO	TV/Radio	SEARCH TV/R	TV/R				

