













































Originale	Sostituto
PWR On/Off	 Power
Mute	 Mute / Dimmer
App	 Shift + Green / APP /
Info	 Info / Angle
Subt.List	 Subtitle / EQ
TV	 TV / Radio /
Video	 Shift + 4
Text	 Text / Goto
Zoom	 Zoom / Size
Menu	 Menu / Home
TV/SAT	 AV / Input / RDS
Menu Up	 Up
Display	 Display / Media
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Exit	 Exit / Cancel / Clear

Originale	Sostituto
Menu Down	 Down
Back	 Back / Return
Volume+	 Vol+
CH/Page+	 CH+ / Page+
Volume-	 Vol-
Audio	 Audio / Lang I/II
CH/Page-	 CH- / Page-
1. ?	 1
2abc	 2
3def	 3
4ghi	 4
5jkl	 5
6mno	 6
7pqrm	 7
8tuv	 8
9wxyz	 9
Guide Pilote	 Guide / EPG / -/-



Originale	Sostituto	Originale	Sostituto
0/10	 0		
FAV Pref.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Dec/Pause	 Pause / Step / Freeze		
SAT Sky	 Smart / List		
	 >> / Preset+		
	 << / Preset-		

