











 

























Originale	Sostituto
	 Mute / Dimmer
	 ? Display / Media
	 Power
	 Radio TV/Radio /
	 Pause / Step / Freeze
	 TXT Text / Goto
	 -/- Guide / EPG / -/-
	 1 1
	 2 2
	 3 3
	 4 4
	 5 5
	 6 6
	 7 7
	 8 8
	 9 9
	 OPT Setup / OPT /

Originale	Sostituto
	 0 / AUX 0
	 0 / AUX Shift + 7
	 Exit Exit / Cancel / Clear
	 Menu Menu / Home
	 Up / CH+ CH+ / Page+
	 Up / CH+ Up
	 Back Back / Return
	 Left / Vol- Left
	 Left / Vol- Vol-
	 OK OK
	 Right / Vol+ Vol+
	 Right / Vol+ Right
	 Down / CH- Down
	 Down / CH- CH- / Page-
	 Page- I<< / Preset-
	 Page- Shift + CH- /
	 Page+ >>I / Preset+





Originale	Sostituto	Originale	Sostituto
 Page+	 +  Shift + CH+ /		
 G	 Smart / List		
 G	 +  Shift + Guide / EPG / -/-		
 i	 Info / Angle		
 Red / F1	 Red / Netflix / Search		
 Green / F2	 Green / APP / Repeat		
 Yellow / F3	 Yellow / YouTube / Repeat		
 Blue / F4	 Blue / Prime Video / Random		
 *	 D.Menu / Top		

