 


 

 





 
 
 


 


 

 

 






 
 






Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 Help	 Shift + Info / Angle
 Home	 Shift + Menu / Menu
 End	 Shift + Exit / Cancel / Clear
 Teletext	 Text / Goto
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 List	 Smart / List
 Media	 Display / Media
 Timer	 Sleep / Timer
 Vol +	 Vol+
 EPG	 Guide / EPG / -/-
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Audio	 Audio / Lang I/II
 CH -	 CH- / Page-

Originale	Sostituto
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Shift + Left
 OK	 OK
 Right	 Shift + Right
 SAT	 Shift + 0
 Down	 Down
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Originale	Sostituto	Originale	Sostituto
	9		9
	<		Left
	0		0
	>		Right
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	TV		TV/Radio /
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Radio		Shift + TV/Radio / Program

Originale	Sostituto

