

 
 


 
 
 

 
 





 




 
 
 

 
 
 



 


 

 
 

 




 

 





 


 




 

 








Originale	Sostituto
 Power	 Power
 [i]/Info	 Info
 Mute	 Mute
 I-II	 Dual
 OK/Select	 Ok
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/+10	 Shift + Guide
 Exit	 Exit

Originale	Sostituto
 Menu	 Menu
 Red/1/Return	 Red
 Green/↓/Subtitle	 Green
 Yellow/Audio	 Yellow
 Blue/Angle	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <<	 <<





Originale	Sostituto
>>	>>
[TV]	TV/R
D-Menu	Smart
TV	Media
AV	AV
P<P	Pre Ch
PP	D. Menu
[≡]	Text
[≡o]	Subt
[≡+]	Format
[≡x]	3D
[≡◆]/Wide	+ Shift + Format
[≡?]	Options
[≡i]/Guide	Guide
[:::]/Subtitle	Back

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info



