











 

 

 

 









 

 





 








 

 

 

 




















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P+	 Up
 1	 1	 V-	 Vol-
 2	 2	 V-	 Left
 3	 3	 Menu	 Menu / Home
 4	 4	 Menu	 OK
 5	 5	 V+	 Vol+
 6	 6	 V+	 Right
 7	 7	 P-	 CH- / Page-
 8	 8	 P-	 Down
 9	 9	 Tv	 TV/Radio /
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 0	 0	 Av	 AV / Input / RDS
 16:9	 Picture / Format	 Red	 Red / Netflix / Search
 S/M/D	 Display / Media	 Green	 Green / APP / Repeat
 PP	 Back / Return	 Yellow	 Yellow / YouTube / Repeat
 →←	 Smart / List	 Blue	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 ≡Text	 Text / Goto

Originale	Sostituto	Originale	Sostituto
 P+	 Up	 TV	 DVD
 V-	 Vol-	 SAT	 AUX
 V-	 Left	 SLOW	 STEP-FREEZE
 Menu	 Menu / Home	 HOLD	 REC MODE
 Menu	 OK	 TUNE-	 TUNE+
 V+	 Vol+	 PRESET-	 PRESET+
 V+	 Right	 EQ	 SURROUND
 P-	 CH- / Page-	 TITLE	 LANG
 P-	 Down	 AUDIO	 SUBTITLE
 Tv	 TV/Radio /	 FORMAT	 SIZE
 Exit	 Exit / Cancel / Clear	 PICTURE	 ZOOM
 Av	 AV / Input / RDS	 TOP MENU	 OPT-TOOLS
 Red	 Red / Netflix / Search	 D.MENU	 SETUP
 Green	 Green / APP / Repeat	 GOTO	 TEXT
 Yellow	 Yellow / YouTube / Repeat	 HOME	 ANGLE
 Blue	 Blue / Prime Video / Random	 MENU	 INFO
 ≡Text	 Text / Goto	 CLEAR	 RETURN





Originale	Sostituto
/≡Mix	Audio / Lang I/II
≡☺Time Page	Subtitle / EQ
≡i Info	Info / Angle
≡i	Guide / EPG / -/-
≡+ FAV MARKER	Fav / Marker / PC
≡◆ OPT-TOOLS SETUP	Setup / OPT /
≡x Cancel	Zoom / Size
≡? Reveal	D.Menu / Top

Originale	Sostituto

