 


 





 


 
 
 
 

 

 
 

 
 
 


 
 
 
 


 
 


 


 

 


 




 


 
 



 



 
 








	Originale	Sostituto		Originale	Sostituto
	Standby	 Shift + Power		A/B/C/D/E	 Exit
	Power	 Power		< Preset	 <<
	Scene 1	 Red		Preset >	 >>
	Scene 2	 Green		Sleep	 Sleep
	Scene 3	 Yellow		Level	 Media
	Scene 4	 Blue		Menu	 Menu
	CD	 1		Audio Sel	 Dual
	MD/CD-R	 2		Display	 Info
	Tuner	 3		Return	 Back
	Multi CH In	 4		Up	 Up
	DVD	 5		Right	 Right
	DTV/CBL	 6		Down	 Down
	DVR	 7		Left	 Left
	V-AUX	 8		Enter	 Ok
	Vol-	 Vol -		Night	 Guide
	Vol+	 Vol +		Sur. Decode	 Pre Ch
	Mute	 Mute		Straight	 Subt





Originale		Sostituto	
	< Prog		Ch -
	Prog >		Ch +
	Enhancer		Options
	Freq / Text		Text
	EON		TV/R
	Mode-PTY		Eject
	Seek-Start		AV

Originale		Sostituto	

