
 



 
 

 





 



 
 
 







Originale	Sostituto
 Power	 Power
 Play/Cut Phono	 Display / Media
 Phono	 2
 I<< Skip CD	 I<< / Preset-
 >>I Skip CD	 >>I / Preset+
 Play CD	 Play / Slow
 CD	 3
 << Search CD	 << / Tune-
 >> Search CD	 >> / Tune+
 Pause/Stop CD	 Pause / Step / Freeze
 Pause/Stop CD	 Stop / Hold
 Disc Skip CD	 Eject / Surround
 Preset - Tuner	 Shift + I<< / Preset-
 Preset - Tuner	 CH- / Page-
 Deck A/B Tape	 Menu / Home
 A/B/C/D/E Tuner	 Smart / List
 Tuner	 6

Originale	Sostituto
 Dir A Tape	 Up
 Preset + Tuner	 CH+ / Page+
 Preset + Tuner	 Shift + >>I / Preset+
 Dir B Tape	 Down
 Tape 1	 4
 << Tape	 Left
 Play Tape	 OK
 >> Tape	 Right
 Tape 2	 5
 Rec/Pause Tape	 Back / Return
 Stop Tape	 Exit / Cancel / Clear
 Rec Mute Tape	 Mute / Dimmer
 EQ Preset Skip	 Audio / Lang I/II
 EQ On/Flat	 Subtitle / EQ
 AUX	 7
 Vol-	 Vol-
 Vol+	 Vol+

