

 
 
 
 
 
 
 

 



 


 


 





 

 
 
 










 


 
 
 


 
 


 



 
 
 
 






| Originale | Sostituto |
|---|---|
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  6 |  6 |
|  5 |  5 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Repeat |  Text |
|  Shuffle |  Media |
|  Play |  Play |

| Originale | Sostituto |
|---|---|
|  Pause |  Pause |
|  Stop |  Stop |
|  >> |  >> |
|  << |  << |
|  >> |  >> |
|  << |  << |
|  Option |  Options |
|  Display |  Info |
|  Enter |  Ok |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Folder Up |  Ch + |
|  Folder Down |  Ch - |
|  Clear |  Exit |
|  Sleep |  Sleep |





| Originale | Sostituto |
|------------------|------------------|
| DIMMER | Dimmer |
| TP | TP |
| MONO | Mono |
| PRESET | Preset Up |
| PRESET | Preset Down |
| MEMORY | Memory |
| TUNING | Tuning Up |
| TUNING | Tuning Down |
| CD | CD |
| USB | USB |
| AUX | AUX |
| TUNER | Tuner |
| iPod | iPod |
| Folder Up iPod | Folder Up iPod |
| Folder Down iPod | Folder Down iPod |
| REPEAT | Repeat iPod |
| SHUFFLE | Shuffle iPod |

| Originale | Sostituto |
|----------------------|-----------------|
| ENTER | Enter iPod |
| Play/Pause iPod | Play/Pause iPod |
| Open/Close | Open/Close |
| CLOCK | Clock |
| TIMER | Timer |
| SEARCH TV/R | TV/R |
| FAV PRE-CH | Pre Ch |
| SOUND DUAL | Dual |
| SHIFT + [Up Arrow] | Shift + Up |
| SHIFT + [Down Arrow] | Shift + Down |
| REC MODE | Rec |
| B | Green |
| A | Red |
| SHIFT + 1 | Shift + 1 |
| SHIFT + 2 | Shift + 2 |
| SHIFT + 3 | Shift + 3 |
| SHIFT + 4 | Shift + 4 |
| SHIFT + 5 | Shift + 5 |
| SHIFT + [+ CH] | Shift + Ch + |
| SHIFT + [- CH] | Shift + Ch - |
| HOME SMART | Smart |
| SHIFT + [APP MEDIA] | Shift + Media |

