 
 
 








 
 

 


 
 




 




Originale	Sostituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dimmer	 Media
 Prog	 Shift + Sleep
 Repeat/Freq/Text	 Text
 Pause	 Pause
 Stop/PTY Seek	 Stop
 Random/PTY Seek Start	 Smart

Originale	Sostituto
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Time/Info	 AV
 Menu	 Menu
 Folder/Preset Up	 Up
 Folder/Preset	 Down
 Right File/A-E	 Right
 Left File/A-E	 Left
 Enter	 Ok
 Input Up	 Ch +
 Input Down	 Ch -
 Display	 Info
 Sleep	 Sleep
 Vol+	 Vol +
 Vol-	 Vol -
 CD	 Yellow





Originale	Sostituto	Originale	Sostituto
Tuner	TV/R		
Band	Green		
Tape/MD	Subt		
AUX/TV	Red		
Dock	Blue		

