 









 

 

 

 

 

 
 

 

 
 


 




 
 






Originale	Sostituto
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Prog/Freq/Text	 TV/Radio /

Originale	Sostituto
 Pause/PTY Seek	 Pause / Step / Freeze
 Random/PTY Seek Start	 Blue / Prime Video / Random
 I<</Preset	 I<< / Preset-
 Play	 Play / Slow
 >>I/Preset Up	 >>I / Preset+
 GUI	 Smart / List
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Set Up	 Setup / OPT /
 Down	 Down
 Top	 Back / Return
 Top	 D.Menu / Top
 Mute	 Mute / Dimmer
 Volume+	 Vol+







 




 






























 

Originale		Sostituto	
	Night		Display / Media
	Volume-		Vol-
	EQ	+	Shift + Subtitle / EQ
	TV	+	Shift + 1
	DVD/CD	+	Shift + 2
	DVD/CD	+	Shift + 3
	Direct		AV / Input / RDS
	AUX	+	Shift + 7
	Tuner	+	Shift + 6
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Zoom		Zoom / Size
	Audio		Audio / Lang I/II

Originale		Sostituto	





Originale		Sostituto	
	Power Tv		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV CH+		CH+ / Page+
	TV CH-		CH- / Page-
	TV Input		AV / Input / RDS
	TV Vol+		Vol+
	TV Vol-		Vol-
	TV		Shift + 1

Originale		Sostituto	
	DVD/CD		Shift + 3
	DVD/CD		Shift + 2
	AUX		Shift + 7
	Tuner		Shift + 6





Originale	Sostituto
Standby/On	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Prog/Freq/Text	TV/Radio /
Pause/PTY Seek	Pause / Step / Freeze
Random/PTY Seek Start	Play / Slow
I<</Preset	I<< / Preset-
>>/Preset Up	>>I / Preset+
Mute	Mute / Dimmer

Originale	Sostituto
Volume+	Vol+
Volume-	Vol-
TV	Shift + 1
DVD/CD	Shift + 3
DVD/CD	Shift + 2
AUX	Shift + 7
Tuner	Shift + 6



