




 
 

 



 

 

 

 
 
 
 
 


 
 
 




 





Originale	Sostituto
 Standby/On	 Power
 Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Dimmer	 Guide
 Sleep	 Sleep
 Bass	 Green
 Treble	 Blue
 Night	 Exit

Originale	Sostituto
 Repeat/Freq/Text	 Text
 Prog	 Shift + Sleep
 A-B	 Pre Ch
 Stop	 Stop
 Pause/PTY Seek	 Pause
 Shuffle/PTY Seek Start	 TV/R
 I<</Preset	 I<<
 Play	 Play
 >>I/Preset Up	 >>I
 Menu	 Menu
 On Screen	 3D
 Set Up	 Options
 Top	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left



