























 

 

 

 







 




 




























Originale		Sostituto		Originale		Sostituto	
	System Power		Power		NIGHT		Smart / List
	Mute		Mute / Dimmer		Volume -		Vol-
	Title/Level		Sound / Title		Display		Display / Media
	STEREO		Audio / Lang I/II		ROCK		1
	EX/ES		Eject / Surround		DVD		2
	Sleep		Sleep / Timer		CD		3
	TV THTR		TV/Radio /		VCR		4
	TEST		Text / Goto		JAZZ		5
	DTV/CBL		AV / Input / RDS		TUNER		6
	Set Menu		Menu / Home		HALL		7
	Up / Preset/CH +		Up		MOVIE		8
	Left/-		Left		MD/CD-R		9
	Select		OK		STRAIGHT		0
	Right/+		Right		DTS		Fav / Marker / PC
	Down / Preset/CH		Down		Standby		Shift + Power
	Return		Back / Return		Multi CH In		Shift + OK
	Volume +		Vol+		ENTERTAIN		Shift + Smart / List


















 





















Originale		Sostituto	
	MUSIC	+	Shift + Display / Media
	V-AUX	+	Shift + 7

Originale		Sostituto	





 



 



Originale	Sostituto
 Standby	 Shift + Power
 System Power	 Power
 CD	 3
 MD/CD-R	 Picture / Format
 TUNER	 6
 Sleep	 Sleep / Timer
 DVD	 2
 DTV/CBL	 Shift + AV / Input / RDS
 VCR	 4
 V-AUX	 Shift + 7
 Multi CH In	 Smart / List
 Freq/RDS Tuner	 AV / Input / RDS
 EON	 D.Menu / Top
 PTY Seek Mode	 Setup / OPT /
 PTY Seek Start	 Text / Goto
 Volume +	 Vol+
 Volume -	 Vol-

Originale	Sostituto
 Mute	 Mute / Dimmer
 1 Tuner	 1
 2 Tuner	 Shift + 2
 3 Tuner	 Shift + 3
 4 Tuner	 Shift + 4
 5 Tuner	 5
 6 Tuner	 Shift + 6
 7 Tuner	 7
 8 Tuner	 8
 9 Tuner	 9
 0 Tuner	 0
 ENTER Tuner	 Shift + OK
 Title/Level Tuner	 Sound / Title
 Up Tuner	 Up
 Menu/Set Menu	 Menu / Home
 Left/- Tuner	 Left
 Select Tuner	 OK



















 







 



 



 







 





 

 



 



 


 










Originale	Sostituto
 Right/+ Tuner	 Right
 Return Tuner	 Back / Return
 Down Tuner	 Down
 Display Tuner	 Display / Media

Originale	Sostituto


 









Originale		Sostituto		Originale		Sostituto	
	Power AV		AV / Input / RDS		>>I DVD		>>I / Preset+
	Standby		Shift + Power		<< DVD		<< / Tune-
	Power		Power		Stop DVD		Stop / Hold
	CD		Shift + 3		>> DVD		>> / Tune+
	MD/CD-R		Shift + 1		Vol+		Vol+
	TUNER		Shift + 6		Vol-		Vol-
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	DVD		Shift + 2		1 DVD		1
	DTV/CBL		Shift + 8		2 DVD		2
	VCR		Shift + 9		3 DVD		3
	V-AUX		Shift + 7		4 DVD		4
	Rec/Disc Skip		Rec / Rec Mode		5 DVD		5
	Pause DVD		Pause / Step / Freeze		6 DVD		6
	Audio DVD		Audio / Lang I/II		7 DVD		7
	Multi CH In		Smart / List		8 DVD		8
	I<< DVD		I<< / Preset-		9 DVD		9
	Play DVD		Play / Slow		0 DVD		0












 
 
 







Originale	Sostituto	Originale	Sostituto
 +10 DVD	 Guide / EPG / -/--		
 ENTER DVD	 Shift + OK		
 Enter DVD	 OK		
 Title/Level DVD	 Sound / Title		
 Up DVD	 Up		
 Menu/Set Menu	 Menu / Home		
 Left/- DVD	 Left		
 Right/+ DVD	 Right		
 Return DVD	 Back / Return		
 Down DVD	 Down		
 Display DVD	 Display / Media		





Originale	Sostituto
System Power	 Power
Mute	 Mute / Dimmer
Play CD	 Play / Slow
Pause CD	 Pause / Step / Freeze
Stop CD	 Stop / Hold
Rec/Disc Skip CD	 Rec / Rec Mode
<< CD	 << / Tune-
>> CD	 >> / Tune+
I<< CD	 I<< / Preset-
>>I CD	 >>I / Preset+
Sleep	 Sleep / Timer
ENT CD	 OK
Volume +	 Vol+
Multi CH In	 Smart / List
Volume -	 Vol-
Display CD	 Display / Media
1 CD	 1

Originale	Sostituto
2 CD	 2
3 CD	 3
VCR	 4
5 CD	 5
6 CD	 6
7 CD	 7
8 CD	 8
9 CD	 9
+10 CD	 Guide / EPG / -/-
0 CD	 0
Standby	 Shift + Power
DVD	 Shift + 2
CD	 Shift + 3
4 CD	 Shift + 4
TUNER	 Shift + 6
V-AUX	 Shift + 7
DTV/CBL	 Shift + 8





Originale

Sostituto

MD/CD-R

 +  Shift + 9

Originale

Sostituto

