


















 
 
 
 

 
 

 




Originale	Sostituto
 Power Receiver	 Power
Display/▼	 Ch -
Menu/▲	 Ch +
Return / Repeat	 Text
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Option	 Options

Originale	Sostituto
 Volume +	 Vol +
 Volume -	 Vol -
Tuning +	 >>
Tuning -	 <<
Up	 Up
Left	 Left
 Enter	 Ok
Right	 Right
Down	 Down
 Return / Repeat	 Back
 Info	 Info
 Phono	 Shift + 1
 Tape	 Shift + 2
 CD	 Shift + 3
 Line 1	 Shift + 4
 Line 2	 Shift + 5
 Line 3	 Shift + 6











 
 
 
 








Originale	Sostituto
 Dock	 Shift + 7
 Tuner	 Shift + 8
 Speakers A	 Red
 Speakers B	 Green
 Enter2	 Pre Ch
 Menu/▲	 Menu
 Display/▼	 Shift + Info
 Top Menu/Shuffle	 D. Menu
 Sleep	 Sleep
 FM	 Smart
 AM	 Media
 [A]	 Shift + 9
 Power Source Line 2/Line 3	 Blue
 Power Source	 Yellow
 Preset+	 >>I
 Preset-	 I<<

Originale	Sostituto




 








 



 




 

Originale	Sostituto	Originale	Sostituto
Power Receiver		Power	
Sleep		Sleep	
Info		Info	
FM		Smart	
AM		Media	
Tuning+		Ch +	
Tuning-		Ch -	
Preset+		Blue	
Preset-		Yellow	
Vol+		Vol +	
Vol-		Vol -	
Option		Options	
Mute		Mute	
Menu/▲		Menu	
Display/▼		Shift + Info	
Return/Repeat		Back	
Up		Up	

Originale	Sostituto	Originale	Sostituto
Down		Down	
Right		Right	
Left		Left	
Enter		Ok	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
+10		Guide	
Enter2		Pre Ch	
Power Source		Text	





Originale	Sostituto	Originale	Sostituto
Power Source Line2/Line3	 AV	AV	AV
Phono	 Shift + 1		
Tape	 Shift + 2		
CD	 Shift + 3		
Line 1	 Shift + 4		
Line 2	 Shift + 5		
Line 3	 Shift + 6		
Dock	 Shift + 7		
Tuner	 Shift + 8		
[A]	 Shift + 9		
Power Source	 Shift + Power		
Play CD	 Play		
Stop CD	 Stop		
Pause CD	 Pause		
Disc Skip CD	 Rec		
<< CD	 <<	<<	<<
>> CD	 >>	>>	>>

Originale	Sostituto	Originale	Sostituto
I << CD	 I <<		
>> I CD	 >> I		

