



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Menu	 Menu
 iPod	 1	 Play	 Play
 CD	 2	 Pause	 Pause
 USB	 3	 >>	 >>
 FM	 4	 <<	 <<
 Phono	 5	 Enter	 Ok
 AUX	 6	 Vol+	 Vol +
 Preset Up	 Ch +	 Vol-	 Vol -
 Preset Down	 Ch -	 Mute	 Mute
 Tuning Up	 >>	 Tone/Balance	 Right
 Tuning Down	 <<	 Tone/Balance	 Left
 Memory	 Rec	 Tone/Balance	 Smart
 Repeat	 Text	 Display	 Info
 Stop	 Stop	 Dimmer	 Subt
 Random	 Media	 Sleep	 Sleep
 iPod Menu Sel Up	 Up	 Pure Direct	 Options
 iPod Menu Sel Down	 Down		

Originale	Sostituto	Originale	Sostituto
 Menu	 Menu	 Play	 Play
 Pause	 Pause	 >>	 >>
 <<	 <<	 Enter	 Ok
 Vol+	 Vol +	 Vol-	 Vol -
 Mute	 Mute	 Tone/Balance	 Right
 Tone/Balance	 Left	 Tone/Balance	 Smart
 Display	 Info	 Dimmer	 Subt
 Sleep	 Sleep	 Pure Direct	 Options



Down